

**PIUSI**

MC Management System Software

System Setup Guide

LEGEND

	Press this key		Press buttons together
	Scroll in the direction of the arrow		Opens another menu
	Scroll either left or right		Touch RED Manager Key

OEM

No Un-Authorised Copying or Distribution Permitted

ENTER PIN NUMBER

For first time use or to assign a new manager key enter the PIN number
- Default is "1234"

GOOD MORNING
MANAGER



SYSTEM



UNIT NAME
UNIT1

Hold down the keys together to enter the configuration menu.

Enter the name for the MC Unit.
- Keypad in Numeric Alpha Configuration

ENTER

REGISTRATION NUMBER
ENABLED/DISABLED

Do you require entry of a vehicle registration number or vehicle code ?

ENTER

ODOMETER
ENABLED/DISABLED

Do you require entry of a mileage or hr value

ENTER

START TIME OUT
1 - 999

Time in seconds, after which motor stops if no fuel has been dispensed, once authorised.

ENTER

FILLING TIME OUT
1 - 999

Time in seconds, after which motor stops once fuelling has finished or has been interrupted.

ENTER

REMOTE PRINTER
YES/NO

Is there a remote serial printer connected ?
- Special printer required, contact your dealer

PC CONNECTED
YES/NO

Is the MC Unit connected to a PC ?
NO = Standalone Unit
YES = Either hardwired or using a red manager key

ENTER

MEASUREMENT UNIT
LITRES/GALLONS

Choose your refuelling measurement
- LITRES or US GALLONS

ENTER

DECIMAL DIGIT
1-2

Change decimal places to display when refuelling / reporting
- Scroll to change value

ENTER

LOW LEVEL INPUT
YES/NO



LOW LEVEL INPUT
ALARM/PUMP CUT OUT

The MC can be controlled by the relay output from the OCIO tank gauge. If enabled the MC will either Alarm or stop the pump on a low level signal.

ENTER

KEY READER
YES/NO

Do you require Touch Key operation of the MC Unit ?
YES = Using keys for refuelling control
NO = Using only PIN codes only

ENTER

MASTER CODE
1234

Displays the current master PIN for the MC Unit
-If you change the master code please keep a record of the change
** this is independent of the PC software setup code.*

ENTER

TOUCH SYSTEM KEY



Touch the RED Manager key to the reader to download the configuration to the key.
-Touching the key requires only gentle force.

**** Heavy pressure will irreversibly damage the key ****

SYSTEM

The MC system will now revert to the main SETUP screen.

CANCEL

TOUCH KEY

The MC system is now configured. Please refer to the guide for adding users.