

Software Installation

The software is compatible with Windows 98,Me,NT4,2000 & XP 256Mb RAM, 500Mb Free Disk space, USB or Serial Port.
-Check that you have the correct model reader (USB or Serial)

Windows XP sp2 requires a download to be installed from www.centretank.com/java/msjavx86.exe
Type WINVER in the Run dialog box to check windows version



Insert the PIUSI CD. The CD should automatically run and launch the software installation menu.

CLICK

To Install software, and follow on screen prompts to RUN or OPEN the application depending upon operating system.

NEXT

To confirm the correct application

YES

To accept the license agreement

NEXT

We recommend that the destination folder is left as default to aid in any troubleshooting.

NEXT

Select STANDARD INSTALLATION for a new fresh install Select UPGRADE to keep existing refuelling data

* Take a copy of any existing installations before proceeding

NEXT

Tick ALL boxes if a fresh install or select just required components

NEXT

Accept default location for program icons and start menu items

The program will now install the required files to the location specified and return to the main launch menu.



If you are using a SERIAL link as shown opposite please now proceed to the software configuration section.

LEGEND





No Un-Authorised Copying or Distribution Permitted

CLICK

To Install drivers for the PW14 adapter and follow

on screen prompts to run the software.

NEXT

To confirm the correct application

INSTALL

To install the software

The program will now install the required files to the location specified and return to the main launch menu.



If you are using the Blue USB (1-Wire) link as shown opposite then please <u>remove</u> it from the PC if you have plugged it in.

CLICK

To Install drivers for the USB (1-Wire) adapter and follow on screen prompts to run the software.

NEXT

To confirm the correct application

NEXT

Select to AGREE to the license agreement

NEXT

Select **BOTH** options for the driver selection screen

NEXT

Follow the prompts to remove the USB lead.

NEXT

We recommend that the destination folder is left as default to aid in troubleshooting.
- Select EVERYONE as the option for the software installation scope.

NEXT

Confirm the installation can now proceed

The program will now install the required files to the location specified.



Software Installation





No Un-Authorised Copying or Distribution Permitted



NEXT

CLOSE

Plug in the USB (1-Wire) adapter once prompted and follow the onscreen instructions on installing new hardware.

Select a USB port that will not need to be used for any other function, as once installed the USB device must not be removed or driver re-installation will be required!

- Proceed to check for new drivers if requested.

OK To close the information window and continue

NEXT To proceed with the 1-Wire installation Port Selection Procedure

Make sure the following is correct PC PORT TYPE = USB ADAPTER REQD = DS9490 PORT NUM = 1

** If this step fails, remove the USB adapter, restart the PC and try the USB driver installation again. If this fails again, then try changing the port that the USB lead plugs into.

The installation has now completed and will return to the main launch menu.

Troubleshooting COM Ports and Settings

How to find your COM port for Windows 2000/XP

Open Control Panel

- •Click on System icon
- •Select Hardware Tab
- •Click on *Device Manager*
- •Click to Expand the Ports Section

Record the COM port and USB Port settings

How to find your COM port for Windows 98/Me

Open Control Panel

- •Click on System icon
- •Select *Device Manager* Tab
- •Click to Expand the Ports Section

Record the COM port and USB Port settings

Checking the COM Port Communication Settings

Open Control Panel

- •Click on System icon
- •Select Device Manager Tab
- •Click to Expand the Ports Section
- •Right Click on the COM port to check and select Properties
- •Select the Port Settings Tab

Bits per second 9600
Data Bits 8
Parity None
Stop Bits 1
Flow Control None



Software Configuration






No Un-Authorised Copying or Distribution Permitted

• Launch the application by selecting it from the Program Files Menu



• Select Serial Ports Selection from the Configuration Menu

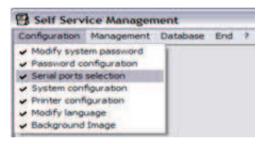

• Enter the password of "1234"





 
If you are using a hardwire connection then this is your RS485 port adapter using the interface shown opposite. Select the appropriate port type and number from the top dropdown list.



If you are using a Touch Key connection then this is either your COM port adapter or your USB adapter. Select the appropriate port type and number from the bottom dropdown list.

• Click the confirm button and acknowledge the setting selection.

• Select System Configuration from the Configuration Menu




• Enter the serial number of the first MC unit into box 1. The background of the box will now turn yellow. Click on the button next to the serial number box (in this example No. 1) The serial number box will now turn green. Select the type of interface required; RS485 if using the hardwire adapter or Key Only if using the Touch Keys.

Click the communication button to verify the connection to the MC – only available if using the Hardwire RS485 adapter.





on the pump keypad.

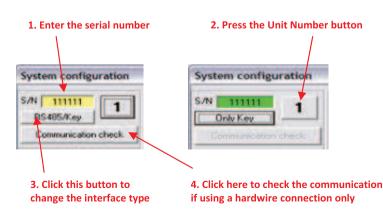

• Exit this screen once the above steps have been undertaken.

 



User Operations Guide







No Un-Authorised Copying or Distribution Permitted




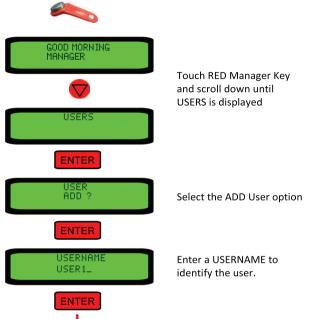

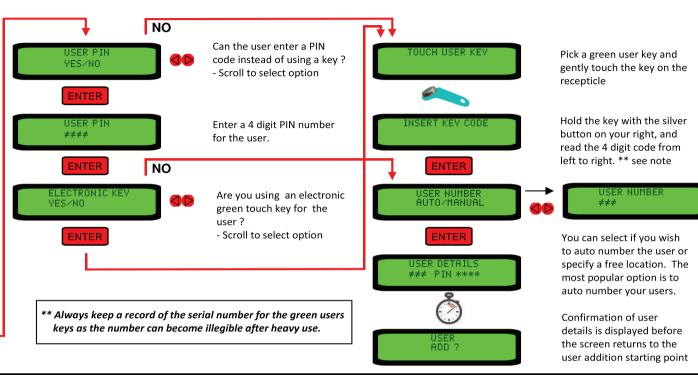



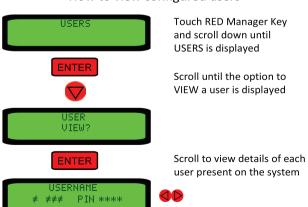

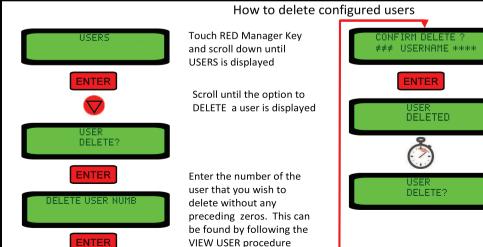

opposite.

Details of the user selected for deletion will be displayed with a delete confirmation prompt



Scroll in the direction of the arrow Scroll either left or right

ENTER

Press this key

Opens another menu

LEGEND



Wait Please...

TOUCH USER KEY

ENTER

USER NUMBER AUTO/MANUAL

ENTER

USER DETAILS

PIN ****

USER ADD ?

Touch RED Manager Key

No Un-Authorised Copying or Distribution Permitted

OEM

User Operations Guide

How to add a new user





Touch RED Manager Key and scroll down until USERS is displayed



USER ADD ?

Select the ADD User option

ENTER

USER1_

Enter a USERNAME to identify the user.

ENTER

USER PIN YES/NO. **ENTER #### ENTER ENTER**

Can the user enter a PIN code instead of using a key? - Scroll to select option

Enter a 4 digit PIN number for the user.

NO

USERS

ENTER

DELETE?

ENTER

ENTER

NO

Are you using an electronic green touch key for the user?

- Scroll to select option

** Always keep a record of the serial number for the green users keys as the number can become illegible after heavy use.

Pick a green user key and gently touch the key on the recepticle Hold the key with the silver

button on your right, and read the 4 digit code from left to right. ** see note

USER NUMBER

You can select if you wish to auto number the user or specify a free location. The most popular option is to auto number your users.

Confirmation of user details is displayed before the screen returns to the user addition starting point

How to view configured users



Touch RED Manager Kev and scroll down until USERS is displayed

Scroll until the option to VIEW a user is displayed



ENTER



Scroll to view details of each user present on the system



How to delete configured users



Scroll until the option to DELETE a user is displayed

Enter the number of the user that you wish to delete without any preceding zeros. This can be found by following the VIEW USER procedure opposite.







DELETE?

 
Details of the user selected for deletion will be displayed with a delete confirmation prompt



ENTER

MC Management System Software


System Options Guide




CANCEL



 No Un-Authorised Copying or Distribution Permitted




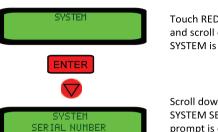

Touch RED Manager Key and scroll down until SYSTEM is displayed

Scroll down until the SYSTEM SERIAL NUMBER prompt is displayed


up the PC connection

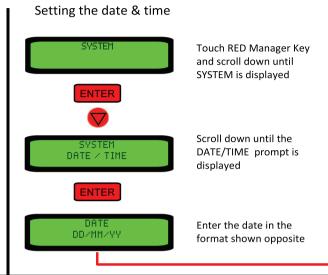




Once the time has been entered you must return to the main screen for the time/date change to take effect. Pressing CANCEL twice will return to the main screen.

Checking if a key is valid on the MC System

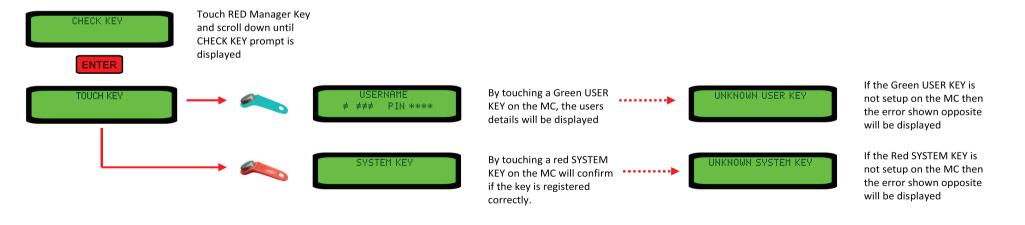



Data Transfer

 



No Un-Authorised Copying or Distribution Permitted

When touching the key, use a very light pressure!

